


MeLE

PCG03 | Quick Start Guide
mini PC

PCG03
V1.0



 
Thanks for Choosing MeLE PCG03!

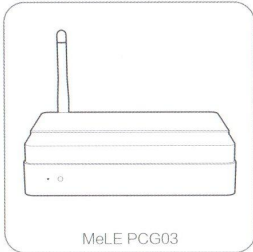

MeLE PCG03



 12V/1A Power Adaptor

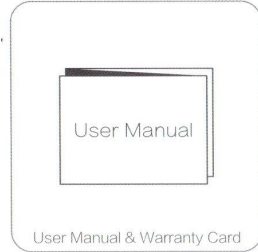

User Manual & Warranty Card

Products Specification

Processor	Intel Atom Z3735F (quad-core, 1.33 GHz) Burst speed up to 1.83 GHz
Graphics Processor	Intel HD Graphics
Memory	2GB DDR3L
Storage	32GB eMMC Expandable via SD/SDHC

USB Host	USB 2.0 Host x 3
Networking	10/100Mbps Ethernet
Wireless Networking	802.11n Wi-Fi Bluetooth 4.0
Operating System	Windows 8.1 with Bing NTE

 








Power LED

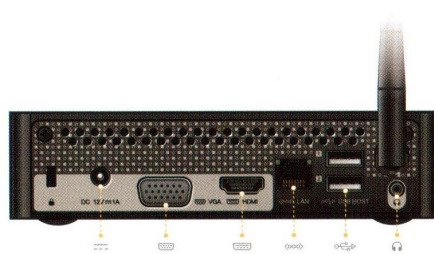The power LED blinks when the box is powered on.



-  Power button
-  SD card reader
-  USB 2.0 Host x 1



-  Headphone / Audio / Microphone Out jack
-  USB 2.0 Host x 2
-  LAN ports
-  VGA port
-  HDMI port
-  Power input (DC12V)

4.1 Connection

Adjusting the resolution of video output via HDMI / VGA to HDTV or Monitor

Follow the steps below to adjust the video output when connecting the MeLE PCG03 to a HDTV or monitor via HDMI/ VGA

 
1. Presse right key of mouse and choose Graphics Properties .
2. Double click Display.
3. Choose the correct "resolution" and "Refresh Rate" to adjust to correct display on TV.



Configuring audio output via an HDMI device or Audio digital devices

Follow the steps below to enable audio output when connecting the MeLE PCG03 to a TV or audio digital devices via HDMI or 3.5mm stera jack.

1. Access the Sound settings via the system Control Panel.
2. Under Playback devices, click the display device that corresponds with your HDMI audiocompatible display
3. Click the Set Default button in the lower right hand corner.
4. Click OK to exit the setup.

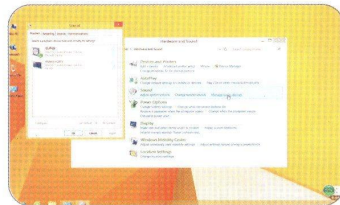

Service

E-mail: meleservice@mele.cn

Web: www.meleshop.com



MeLE Official Store



MeLE Forum



MeLE User Manual



YouTube