

MINI HD MEDIA BOX(PDM08H)



Quick Guide

MINI HD MEDIA BOX is a mini HD media player which can read Flash Drive, External HDD and SD/MMC/MS card, decode the content included, and then output via HDMI or Composite (AV) on your TV or monitors.

1

Part II Installation & Connections

2.1 Main Unit



4

Part I Feature list

1.1 Interface

USB Host

USB 2.0 with OTG; High speed (480M bps) & full speed (12M bps)
Support FLASH drive, external HDD (FAT32 & NTFS file system)

3 in 1 Card Reader

Support SD, and MS card.

1.2 Format

Supported codec:

RM, RMVB, AVI, DIVX, MKV, MOV, HDMOV, MP4, M4V, PMP, AVC, FLV, VOB, MPG, DAT, MPEG, H. 264, MPEG1/2/4, WMV

1.3 Video Output


HDMI output to 1080P
Composite (AV)

2

- 1) USB Host port
- 2) LED light
- Green color: running;
Red color: standby
- 3) IR Receiver
- 4) SD / MMC / MS card slot
- 5) Composite (AV) port
- 6) HDMI port
- 7) Power supply jack


5

1.4 Included:

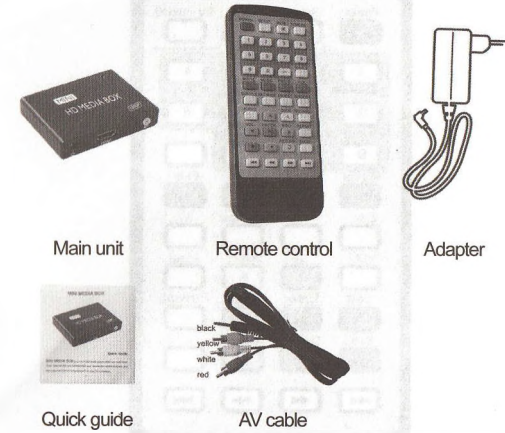


3

2.2 Connections of Main Ports

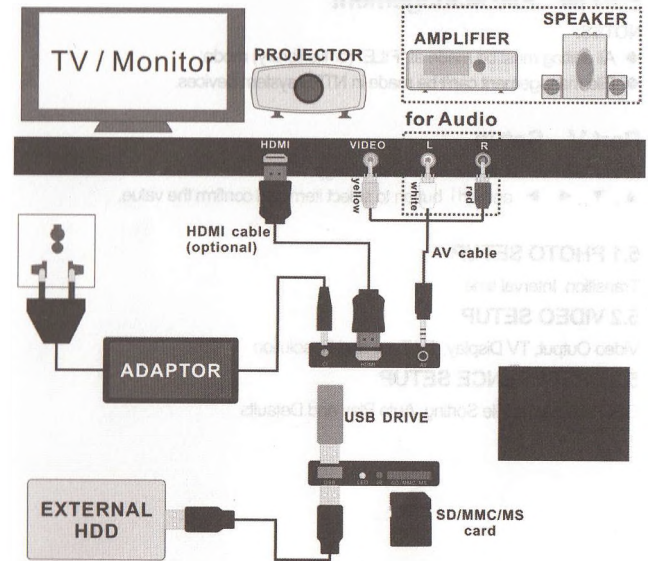

6

2.3 Remote

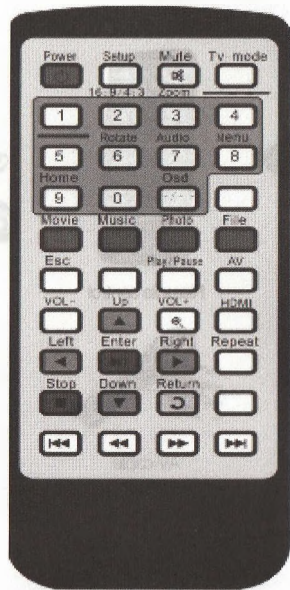

Pull out the thin sheet if first use.

7

Part III File Management

NOTES:

- ◆ All editing must be made at "FILE" (or file library) mode;
- ◆ File management can't be made in NTFS system devices.

Part V Setup

Press "SETUP" button to enter Setup page.

▲, ▼, ◀, ▶ and ▶| button to select item and confirm the value.

5.1 PHOTO SETUP

Transition, Interval time

5.2 VIDEO SETUP

Video Output, TV Display, TV Type and Resolution

5.3 PREFERENCE SETUP

OSD Language, File Sorting, Auto Play and Defaults

10

- 1) Power
- 2) Set up
- 3) Mute
- 4) TV-Mode
- 5) Numeric Button "1"
- 6) Numeric Button "2"
- 7) Numeric Button "3"
- 8) Numeric Button "4"
- 9)) Numeric Button "5"
- 10)) Numeric Button "6"
- 11)) Numeric Button "7"
- 12)) Numeric Button "8"
- 13)) Numeric Button "9"
- 14)) Numeric Button "0"
- 15) OSD
- 16)
- 17) Movie
- 18) Music
- 19) Photo
- 20) File
- 21) ESC
- 22)
- 23) Play/Pause
- 24) AV
- 25) Vol-
- 26) Up
- 27) Vol+
- 28) HDMI
- 29) Left
- 30) Enter

- 31) Right
- 32) Repeat
- 33) Stop
- 25) Down
- 26) Return
- 27)
- 28) Fast forward
- 29) Previous
- 30) Next
- 31) IFast rewind

8

Part IV Brief


HD Media player Center

- support Blu-ray Navigation and Blu-ray
- support all HD movies format
- HDMI AV output
- External harddisk and U-Disk and SD/MMC/MS card Reader
- Ebook
- Dimension: 80x56x15 mm

11

Part III Playback

Power on the unit, and then the screen will show following main page:

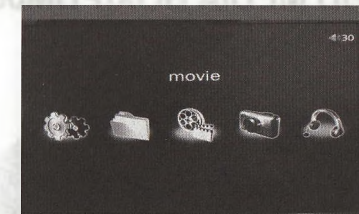

Note: To match the video output of this player with your TV perfectly, you may need to press the "TV-MODE" button on the remote control repeatedly until it shows well.

- ▲, ▼, ◀, ▶ button to select file, folder or storage device
- ▶| button to pause or play selected file; to enter to selected folder
- button to stop playing current file
- ⌂ button to return to parent directory or the main page
- ◀, ▶ button to decrease / increase volume during movie or music playback

You can enter into "MOVIE", "MUSIC", "PHOTO" or "FILE" mode by the shortcut button with same name on the remote control.

9



Above will be changed without notice if software has been upgraded.

12